

INSTRUCTION MANUAL – RADIANT HEATER

LIFESTYLE RADIANT HEATER

505-112



This heater is not suitable for primary heater purposes.



Fitting and operating instructions

USER INSTRUCTIONS

Read these instructions before using the appliance. Keep them in a safe place.

The heater must be installed and used in accordance with the regulations currently in force.

Position on a level surface and always use in a well ventilated area.

The appliance should not be installed in a room the volume of which is less than 82 m³ for living rooms and 41m³ for other rooms. The air renewal ventilation should not be less than 105 cm². High and Low within the room.

The heater is fitted with a safety device which will shut off the gas and extinguish the appliance if normal ventilation conditions are not met.

The appliance is fitted with a butane 21mm quick on regulator.

TO FIT THE GAS CYLINDER

The heater is designed to operate with 7kg or 15kg butane cylinders.

Remove the back panel from the device.

Place the gas cylinder on the base of the heater.

Connect the regulator to the cylinder according to the regulator instructions, ensuring that the hose is not twisted or damaged.

If the hose shows signs of damage or excessive wear it must be replaced before lighting.

LIGHTING THE HEATER

Connect and turn on the regulator according to the regulator instructions.

Ensure that the heater is positioned with a minimum clearance of 60cm from flammable materials.

The heater has three heat settings, minimum, medium, high.

For MINIMUM heat - Rotate the button to 

For MEDIUM heat - Rotate the button to 

For MAXIMUM heat - Rotate the button to 

Turn the control knob anticlockwise toward the minimum position and hold down for 20 seconds. This will purge the air out of the gas system. Continue to turn the control knob anticlockwise to generate the spark and ignite the pilot flame.

When the heater is lit continue to hold down the control knob for 10 seconds.

If on releasing the button the pilot flame goes out turn the control knob to the off position, wait one minute and repeat the procedure.

Turn the control knob to the desired setting.

TURNING THE HEATER OFF

1. Turn the control knob to the off position.

Turn the gas regulator to the off position according to the regulator instructions.

It is recommended to disconnect the regulator from the gas cylinder when not in use.

SAFETY INSTRUCTIONS

DO NOT: Use the heater in high rise flats, basements, bathrooms or bedrooms.

DO NOT: Use any other gas except butane.

DO NOT: Attempt to clean the heater until it has cooled down.

DO NOT: Use naked flame to detect gas leaks.

DO NOT: Allow children or pets to play near the heater.

DO NOT: Touch the front of the heater or attempt to move it when in use.

DO NOT: Use in leisure vehicles such as caravans or motorhomes. **DO NOT:** Position the fire close to walls, furniture, curtains or any inflammable material as this could result in fire.

DO NOT: Cover or place anything on top of the heater.

If you smell gas, turn off the heater, take it outdoors and call your gas cylinder supplier

Warning: Never attempt to light the heater if the hose is damaged or loose or if you suspect it may be leaking gas. In the event of a gas leak have the unit checked by a competent person. When changing gas cylinders make sure that there are no sources of ignition or naked flames near.

DO: Place the heater on a flat level surface at all times.

DO: Leak test the unit after long periods of storage.

DO: wait for 3 minutes to re-light the heater should the heater turn off for any reason.

DO: Store gas cylinders outside, above ground, in a safe secure place.

DO : Allow the heater to cool down before moving.

ALWAYS: Follow any safety instructions supplied with the gas cylinder.

ALWAYS: Keep the heater well away from glass doors and windows to avoid damage.

NUMBER OF RADIANTS IN USE	KW OUTPUT	OTHER ROOM SIZE	LIVING ROOM SIZE	VENTILATION APERTURE	
				HIGHER	LOWER
1	1.5kW	15 M3	30 M3	105 cm2	105 cm2
2	2.7 kW	27 M3	54 M3	105 cm2	105 cm2
3	4.2 kW	42 M3	84 M3	105 cm2	105 cm2

Model	H46
Power	4,2 kW
Injector	0,80 - 0,52
Destination Country	GB/IE
CE	0464-18
Category	I3b
Gas Consumption	305 g/h
Type of gas	G30 Butane
Pressure	28/30 mbar
Norm	EN449
O.D.S.	21100/307
Energy efficiency class	A
Direct heat output	4,2 kW
Indirect heat output	0 kW
Minimum heat output	1,6 kW
Pilot	0,17 kW
Energy efficiency index	89%
Useful efficiency at nominal heat output	100%

If you need any assistance, please contact us:

Email: sales@lifestyleappliances.co.uk

Tel: **01527 65126**

Lifestyle Appliances Ltd.

Unit 66 Enfield Industrial Estate

Redditch

Worcestershire

B97 6DE

02/2021