


## KAIDA TRAVELLER FIRE PIT

### INSTRUCTION MANUAL

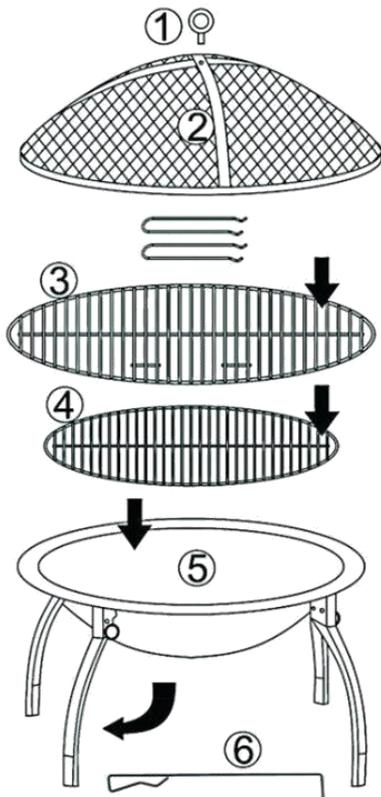

#### EXPLODED VIEW:

1. Handle
2. Fire Guard
3. Cooking Grid
4. Wood Grate
5. Bottom Bowl
6. Hook

#### HARDWARE:

- A. Nut  
(M5 Black Nickel-Plated Hex Nut)

#### WARNING – FOR YOUR SAFETY

Before using this outdoor fire pit, make sure you have read, understand and are following all information provided and presented on page 1. Failure to follow these instructions can cause death, serious injury or property damage.

#### Operating Instructions

##### Lighting

1. Make sure the bowl is clear of ash.
2. Place a layer of dry kindling or a natural fire starter onto the centre of the grate.
3. Above that, place a layer of dry seasoned hardwood that is cut to lengths no more than  $\frac{3}{4}$  of the diameter of the bowl.
4. Safely light the kindling or fire starter with a match.
5. Using the hook that is provided, and heat resistant gloves (not included), replace fire guard once the kindling or fire starters are lit.

##### Tending the Fire

You may need to shift and/or add logs for an ideal experience.

**DO NOT place a hot fire guard or hot fire tools onto combustible surfaces such as grass, wooden decking, or furniture.**

1. Using the hook that is provided, and heat resistant gloves (not included), carefully remove the fire guard.
2. While using a long-handled fire pit tool, shift coals and logs to allow additional airflow.
3. Do NOT add gasoline, kerosene, diesel, lighter fluid, or alcohol to relight or enhance the fire.
4. Wait until coals are glowing before adding additional wood. Should additional wood be required, place wood on top of coals.
5. Using the hook that is provided and heat resistant gloves (not included), replace the fire guard.

##### Extinguishing

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish - this is dangerous and can cause damage to the product.

#### Cleaning & Care

##### Inspecting

This fire pit should be inspected on a regular basis to ensure product safety and to increase this product's lifespan.

**DO NOT attempt to inspect this outdoor fire pit until the fire is COMPLETELY distinguished.**

1. Check handles and ensure that they are secure.
2. Inspect product components for any signs of damage or rust.
3. If damage to any component is detected, do NOT operate until the product has been repaired appropriately.

##### Cleaning

This outdoor fire pit should be cleaned regularly. By cleaning and maintaining the fire pit, this product's lifespan will improve.

*NOTE:* After repeated use, product discolouration may occur.

**DO NOT attempt to clean this outdoor fire pit until the fire is COMPLETELY distinguished.**

**DO NOT use oven cleaner or abrasive cleaners as they will damage this product.**

**DO NOT clean any part of this fire pit in a washing machine, it may damage the product's finish.**

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built up creosote from components with a chimney cleaning product.

##### Storage

**DO NOT put fire pit back into provided bag with hot coals or wood - wait until cold and clean before storing in carry bag.**

1. Once the fire is extinguished, coals are cold and the fire pit is cool, remove the ashes and dispose of them appropriately.
2. Cover the fire pit with the durable vinyl bag designed to fit this unit.
3. Store in a location away from children and pets.

*NOTE:* Store this outdoor fire pit with cover and in a dry location to maximise product life.

#### Distributed by:

**Lifestyle Appliances Limited.**

Unit 66 Enfield Industrial Estate,  
Redditch,  
Worcestershire,  
B97 6DE

#### Contact Us:

**Tel:** 01527 65126

**Email:** sales@lifestyleappliances.co.uk

**Web:** www.lifestyleappliances.co.uk

#### Office Opening Hours:

**Mon – Thu: 9AM - 5PM**

**Fri: 9AM – 4PM**

**Sat + Sun: CLOSED**